


## **Box lid**

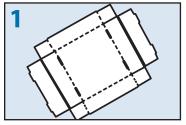


1. Place lid upside down on a flat surface.

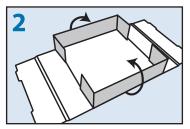

2. Fold opposite sides up and tabs in.

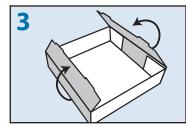


3. Fold the remaining sides up and over, locking them into place.

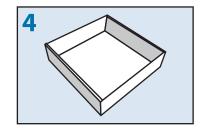


4. Picture of folded lid.


## Box

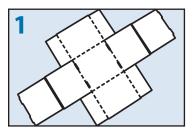


1. Place box upside down on a flat surface.

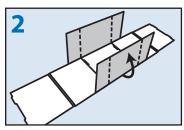


2. Fold opposite sides up.

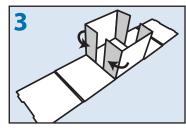


3. Fold the tabs in.

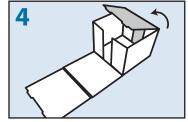

4. Fold one side of the box up and over, locking into place. Repeat on remaining side.

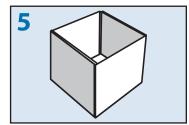

5. Picture of folded box.

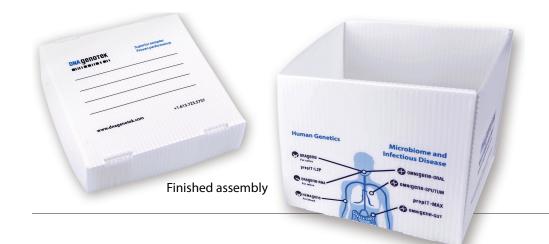

DNA Genotek Inc. 3000 - 500 Palladium Drive Ottawa, ON, Canada K2V 1C2 Subsidiary of OraSure Technologies, Inc. Toll-free (North America): 1.866.813.6354 Tel.: +1.613.723.5757 • Fax: +1.613.723.5057 www.dnagenotek.com • info@dnagenotek.com MK-00532 Issue1/2015-11

